


STRIP DOOR MOUNTING INSTRUCTIONS

Parts List:

1. Mounting Bars (excluding the support anchors).
2. Retaining Bars.
3. 1/4" Strip Fastening Nuts.
4. PVC Strips with pre-punched holes.

Hardware Mounting: Install the Mounting Bars (s) to the wall above the doorway or under the Header. (Mounting Anchor to be supplied by the installer).

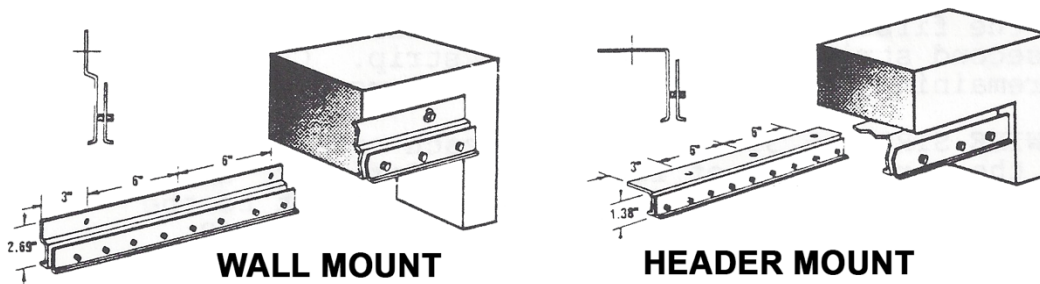


Note:

Center bar just above the opening. Start anchor in at one end. Bring the other end up to a level position. Leveling can be accomplished by hanging one temporary strip at each end and making heights equal.

If mounting bar is in two sections, butt together and join with retainer bar to insure proper mounting positions.

Hanging PVC Strips:

All strips have a natural curve across the width. Concave faces should be alternated when installing to interlock and create a seal against drafts.

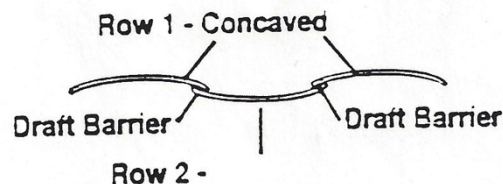

If you need further assistance please call: **513-351-3400**

OVERLAPPING STRIPS

☐ “4 WIDE STRIPS – 100% OVERLAP (2” each side)

Hang the first strip of row 1 to the far left, align the second strip against the first strip. Repeat to the far right. Center the remaining strips for row 2 over the seam.

☐ “6 WIDE STRIPS – 66% (2/3) OVERLAP (2” each side)

Hang the first strip of row 1 to the far left, skip 2”, hang the second strip, skip 2” and repeat to the far right. Center the remaining strips for row 2 over 2” gaps.

☐ 8” WIDE STRIPS – 50% OVERLAP (2” each side)

Hang the first strip of row 1 to the far left. Skip 4”, and repeat to the far right. Center the remaining strips for row 2 over 4” gaps.

☐ 8” WIDE STRIPS – 100% OVERLAP (4” each side)

Hang the first strip of row 1 to the far left. Align the second against the first strip. Center the remaining strips for row 2 over seams.

☐ 12” WIDE STRIPS – 33% OVERLAP (2” each side)

Hang the first strip of row 1 to the far left. Skip 8”, hang the second strip, skip 8” and repeat to the far right. Center the remaining strips for row 2 over the 8” gaps.

☐ 12” WIDE STRIPS – 50% OVERLAP (3” each side)

Hang the first strip of row 1 to the far left. Skip 9”, hang second strip, skip 9” and repeat to the far right. Center remaining strips (row 2) over the 9” gap. Row 1 has “standard” holes (starting in 1” from the end. Row 2 has “offset holes (starting in 2” from the end).

☐ 12” WIDE STRIPS – 66% (2/3) OVERLAP (4” each side)

Hang the first strip of row 1 to the far left. Skip 4”, hang the second strip, skip 4” and repeat to the far right. Center the remaining strips for row 2 over 4” gaps.

☐ 12” WIDE STRIPS – 100% OVERLAP (6” each side)

Hang the first strip of row 1 to the far left. Align the second strip against the 1st strip. Repeat to the far right. Center the remaining strips for row 2 over the seams.

☐ 16” WIDE STRIPS – 25% OVERLAP (2” each side)

Hang the first strip of row 1 to the far left, Skip 12”, hang the second strip, skip 12” and repeat to the far right. Center the remaining strips for row 2 over 12” gaps.

☐ 16” WIDE STRIPS – 50% OVERLAP (4” each side)

Hang the first strip of row 1 to the far left, skip 8”. Hang the 2nd strip, skip 8” and repeat to the far right. Center the remaining strips for row 2 over 8” gaps.

☐ 16” WIDE STRIPS – 100% OVERLAP (8” each side)

Hang the first strip of row 1 to the far left. Align the second strip against the 1st strip. Repeat to the far right. Center the remaining strips for row 2 over the seams.

After the strips have been placed on Mounting Bars, place Retaining Bars over the studs, attach lock nuts and tighten. Bevel on Retaining Bars should be at the bottom and face out.

Further assistance, please call National Access Design at 513-351-3400.